


Basic SPR SCREEN

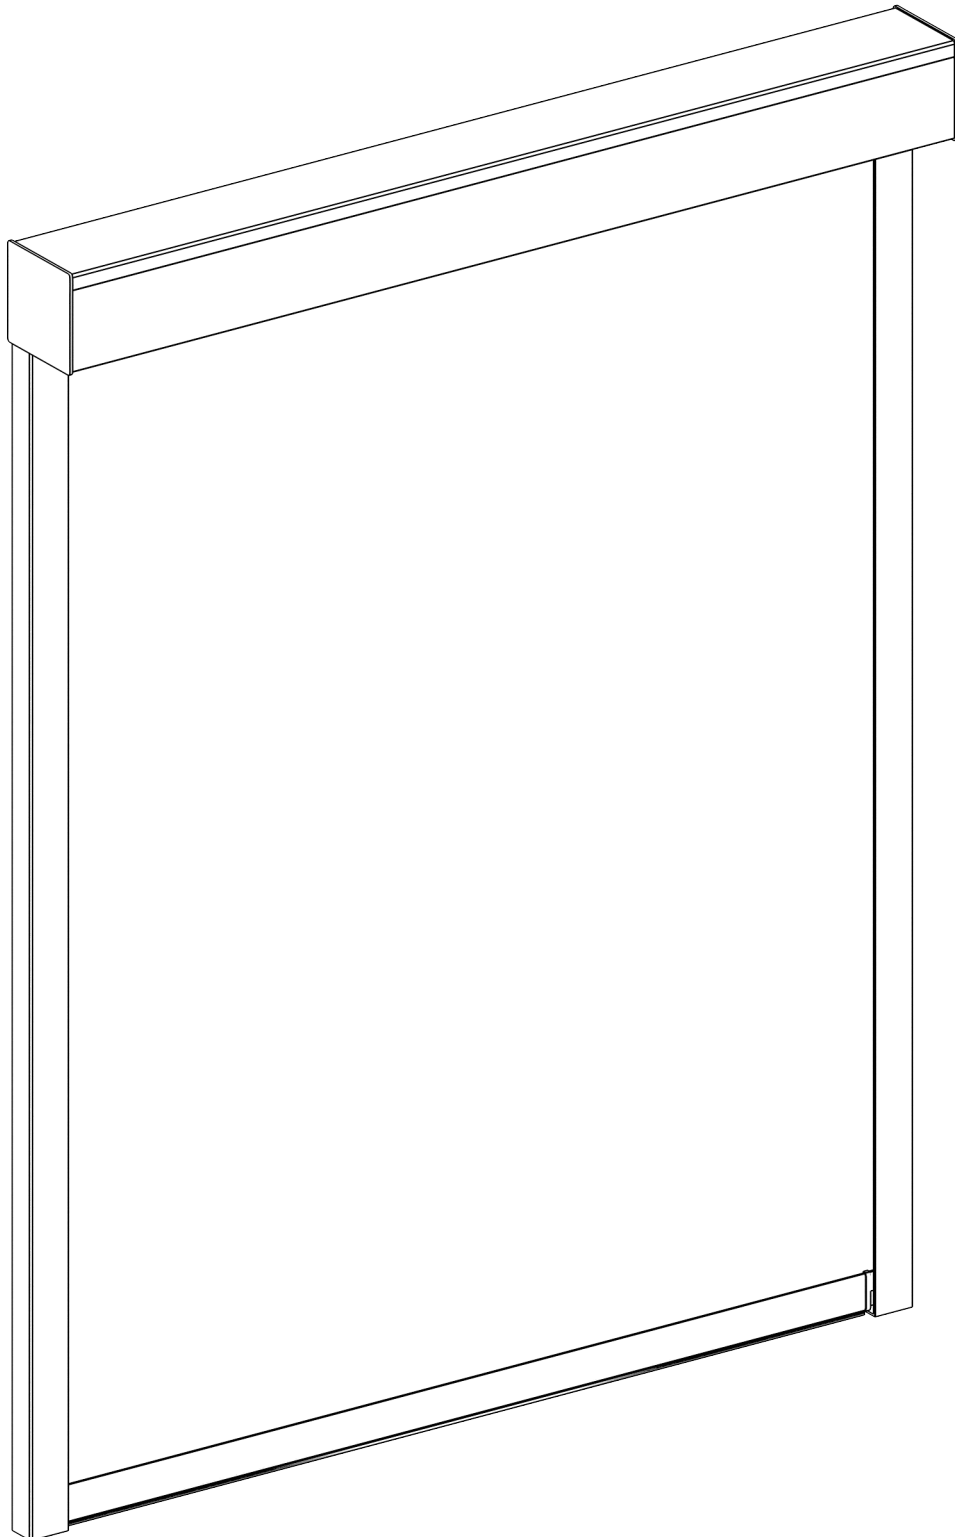


The delivery should include:

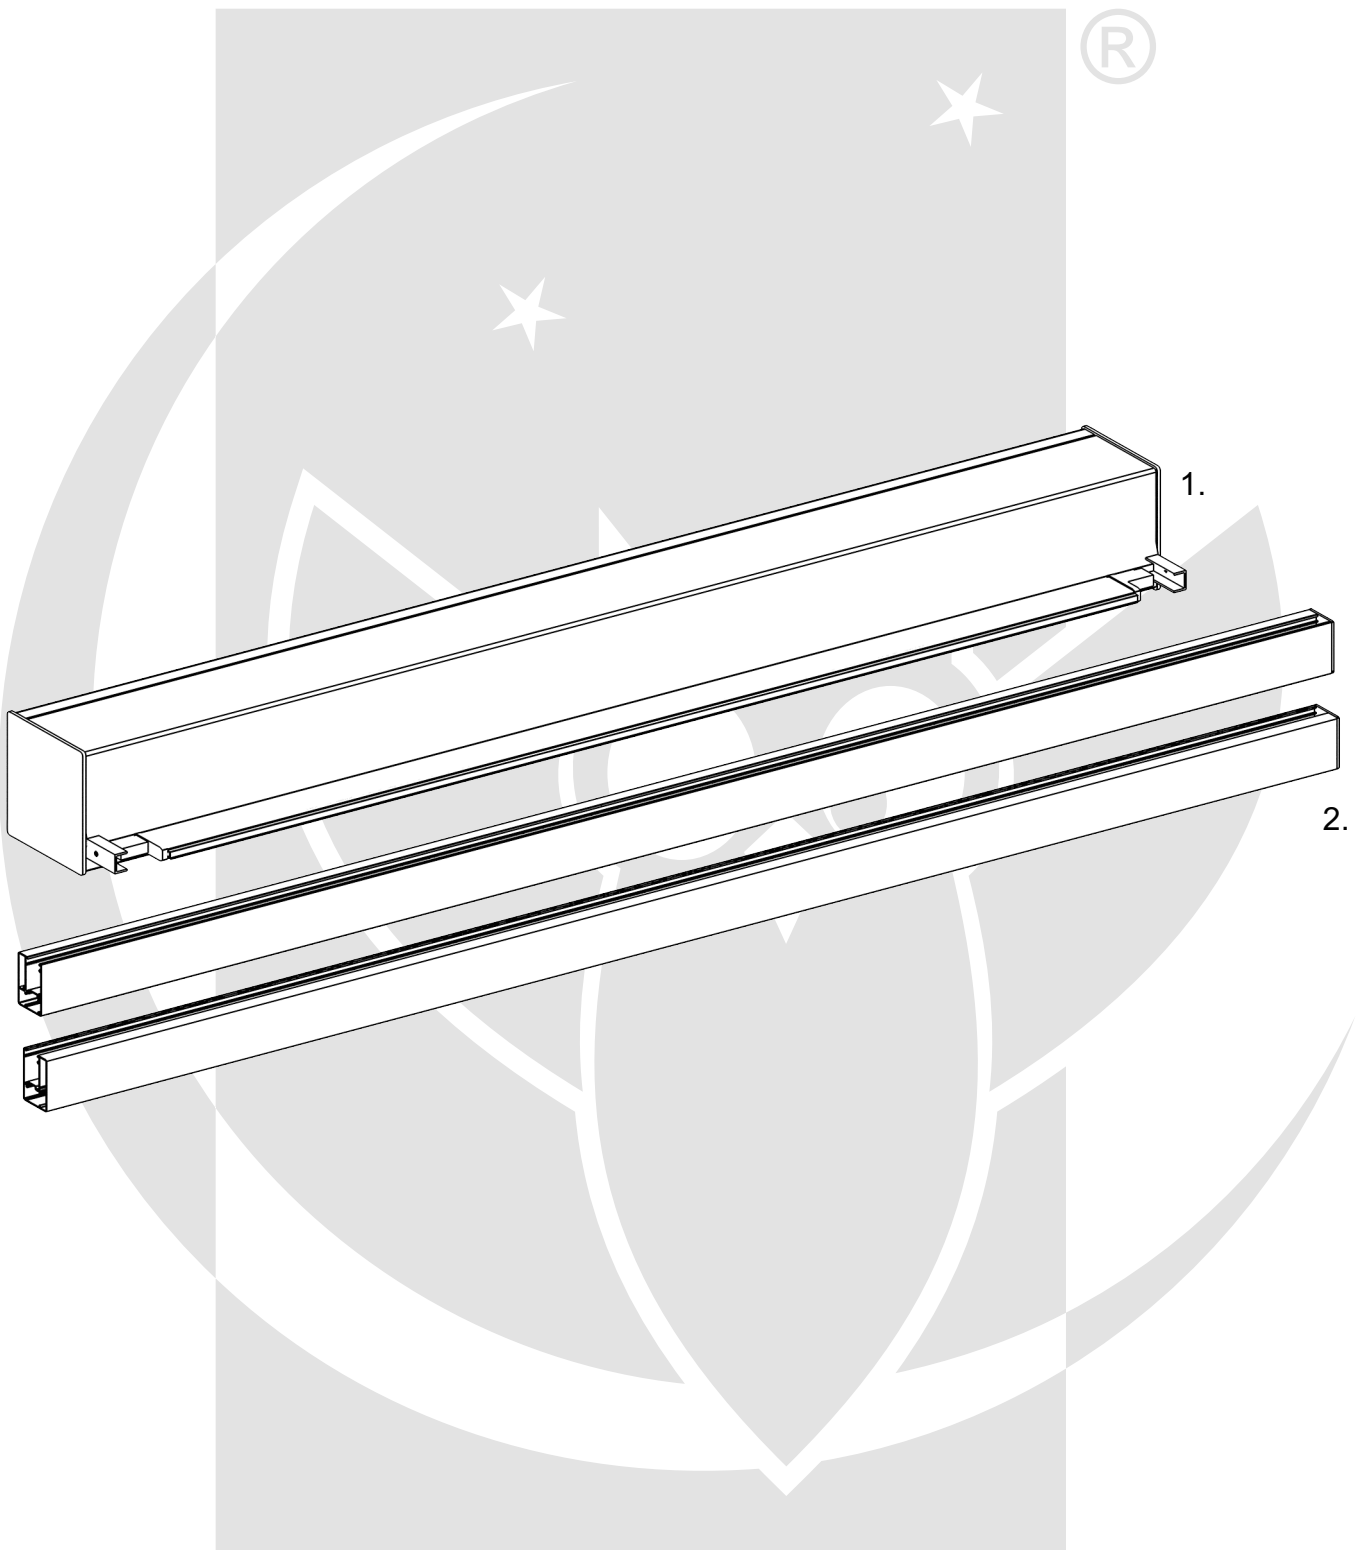

1. Cassette with cover.
2. Sideguides.

Assembling the cassette and guides.



1. Insert the cassette into the guides.

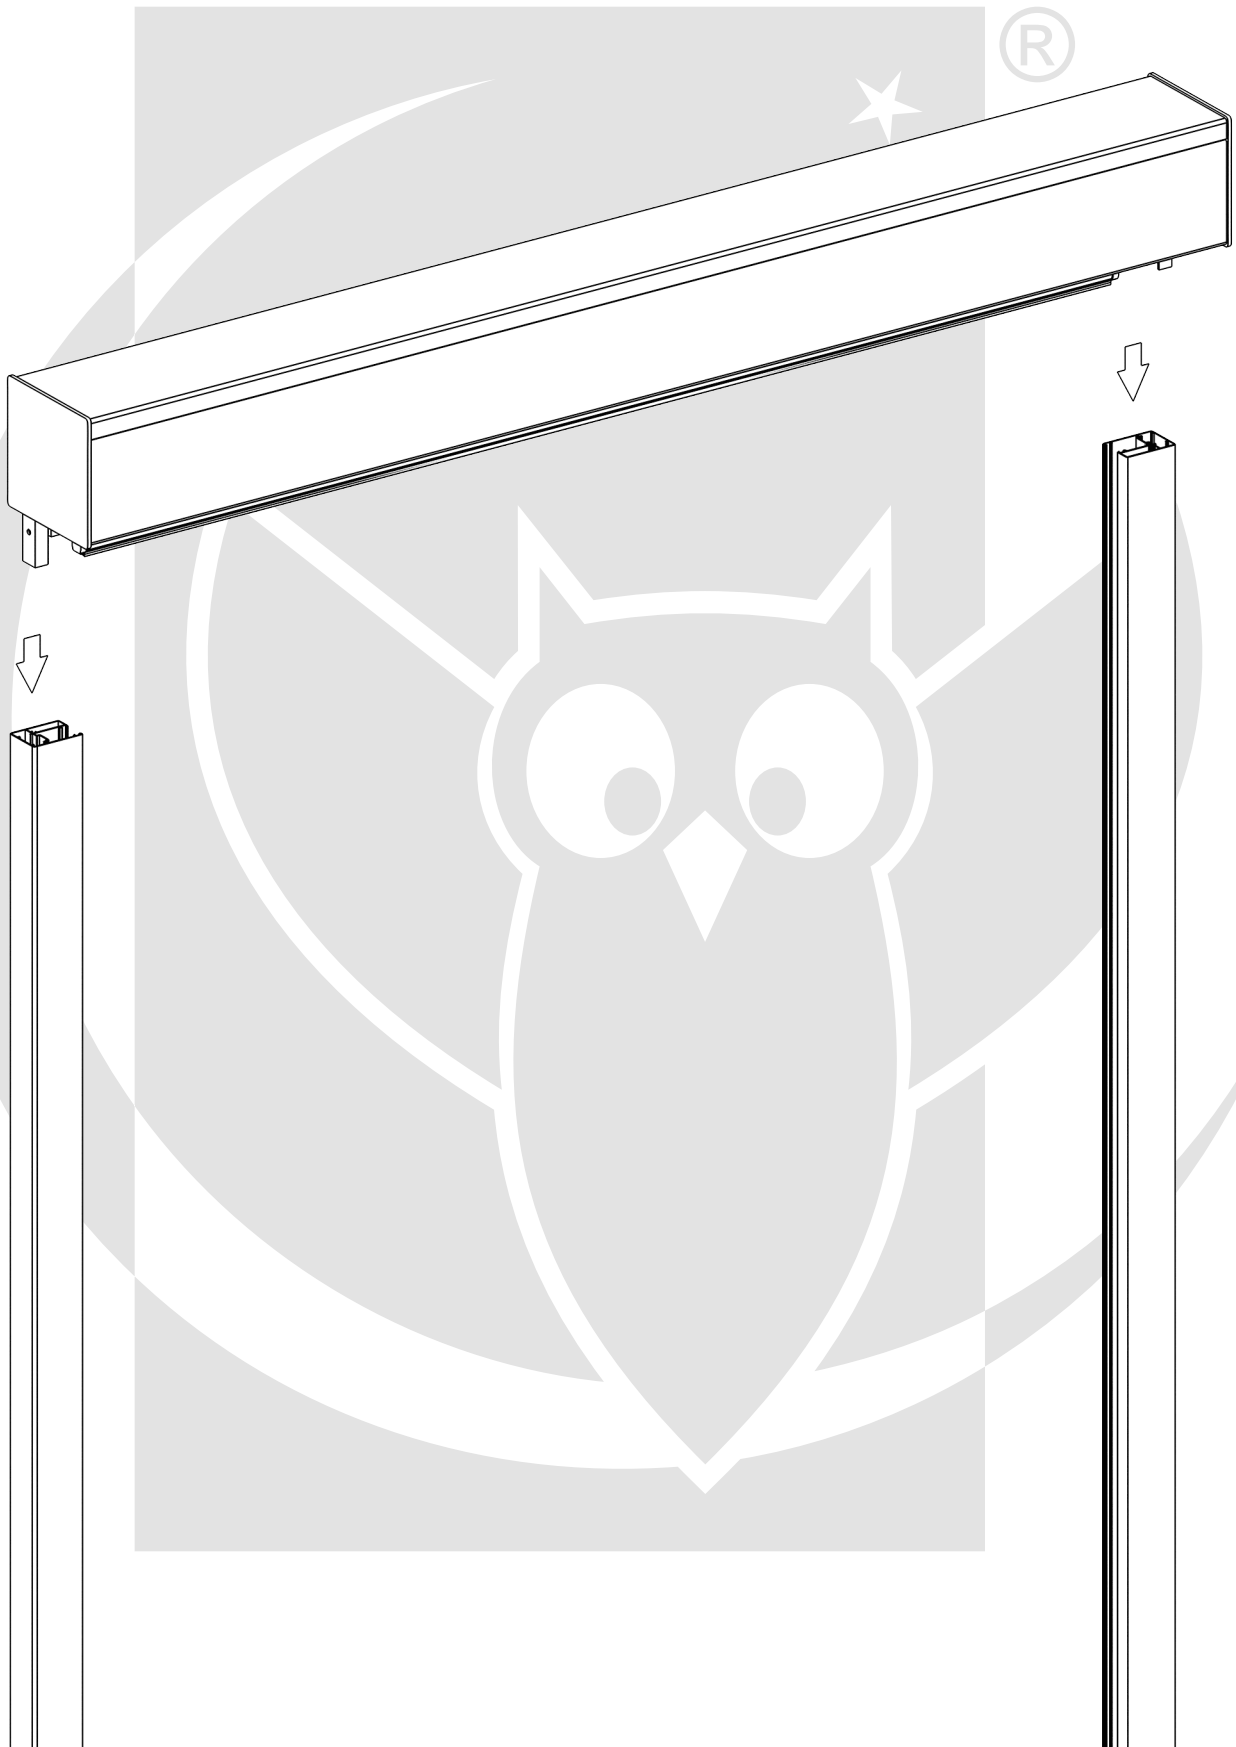



Installation of the cover.

Installation of guides with using of the screws.

The guides should be screwed with the use of appropriately selected mounting accessories. They already have the mounting holes prepared in accordance with the selected mounting type (frontal / lateral mounting).

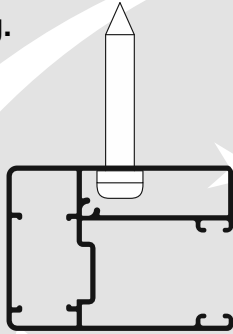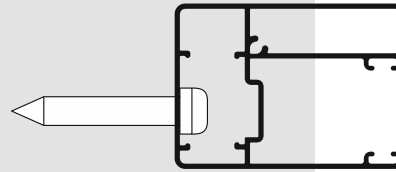Frontal mounting.**Lateral mounting.**

Warning! When screwing the guides, make sure that the rails are screwed vertically parallel to each other; that the cassette is mounted horizontally and the diagonals between the guides are equal.

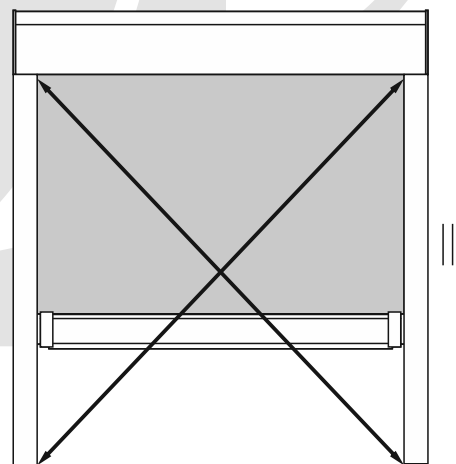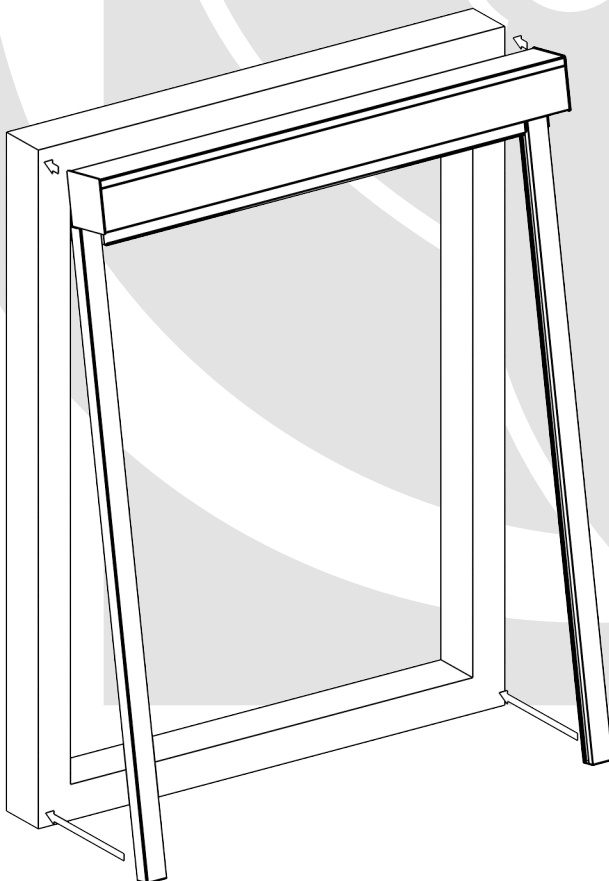



Fart Produkt Sp. z o. o. Sp. k.
ul. Towarowa 3, 87-100 Toruń
tel. +48 56 623 55 77
e-mail: export@fartprodukt.pl
www.fartprodukt.pl